

★★★ TRISTAR

- EN | Instruction manual
- NL | Gebruiksaanwijzing
- FR | Mode d'emploi
- DE | Bedienungsanleitung
- ES | Manual de usuario
- PT | Manual de utilizador
- IT | Manuele utente
- SV | Bruksanvisning
- PL | Instrukcja obsługi
- CS | Návod na použití
- SK | Návod na použitie



SZ-2010

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES / TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIÇÃO DOS COMPONENTES / DESCRIZIONE DELLE PARTI / BESKRIVNING AV DELAR / OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SÚČASTÍ



EN Instruction manual

SAFETY DIRECTIONS

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the appliance unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INSTRUCTIONS

- Risk of suffocation! Keep the packaging material away from children and animals.
- Keep the device, cord and plug away from water or other liquids in order to avoid the risk of an electrical shock. Never touch the mains plug, cord or device with wet or damp hands.
- Keep animals, hair, jewelry, loose clothing, fingers and all other parts of the body away from the moving parts or openings of the appliance when it is in operation. They can be caught in the vacuum cleaner. If something gets stuck in the vacuum cleaner, switch the appliance off immediately.
- Take special care to avoid falling when cleaning stairs.
- Wear firm footwear during use.
- Use and store the device only out of the reach of children. Improper use can result in injury and electric shock. The power cord may also not be accessible to children.

PROPER USE

- The appliance must only be used domestically, it is not suitable for industrial or commercial use.
- Only use it on normally soiled hard floors, short pile carpets or upholstered furniture, all other use is considered improper use and is prohibited.
- The appliance must not be used to clean:
 - People, animals, plants or items of clothing on the body, always keep the appliance away from body parts and hair.
 - Glowing or burning objects like ash, charcoal, burning cigarettes, matches or highly flammable substances.
 - Water and all other liquids
 - Pointed objects like broken glass or nails.

- Do not expose to high temperatures or open flames and avoid high humidity or wetness.
- Never place on a surface that is not dry.
- Empty the dirt container regularly. The dirt container must also be emptied.
- Allow the dirt container to dry completely before reinserting the device.
- Only use original accessories from the supplier.
- Store the device in a dry, well-ventilated and accessible place.
- Never fill the dirt container to the top.

BATTERY WARNING

- Rechargeable battery
- Do not attempt to open the battery. There are no serviceable parts inside.
- Do not disassemble or modify the battery pack. Only replace with a genuine Tristar battery. A non-genuine battery can cause a fire.
- The battery is a sealed unit and should not constitute a safety hazard. Do not touch the battery don't touch the battery terminals, avoid inhalation, skin or eye contact.
- Should a battery leak, do not touch the battery compartment.
- Avoid storing the battery in a hot or cold place. The battery is fully charged when the LED light is on.
- Do not dispose of a battery in a fire. It may explode if damaged. Do not dispose of it as household waste.

PARTS DESCRIPTION

1. Charging LED indicator
2. On/Off switch
3. Removable rechargeable battery
4. Dirt container
5. Dust filter
6. Dirt container release button
7. Floor head (electrobrush)
8. Crevice tool
9. Tube
10. (H)EPA E11 filter

BEFORE THE FIRST USE

Installation of the battery

- Take the appliance out of the packaging. Remove the protective foil or plastic wrap.
- Insert the removable battery into the battery compartment.
- Insert one end of the power cord into the vacuum cleaner.

Charge

- Plug the charge adaptor into a standard wall outlet.
- The charging LED indicator will light up.
- Fully charge the battery before use.
- It will take about 4 hours to fully charge.
- All three led lights will light up when fully charged.
- The adapter may be used in any country.

USE

- You should regularly clean the floor head and crevice tool to keep them clean in order to maintain the suction power.
- Hold the handle and the tube firmly.
- The device will not operate if the battery is not fully charged.
- Press the switch on the handle to turn the device on.
- Press the switch on the handle to turn the device off.
- If the floor brush releases, stop the device and carefully push it back into the dirt container.
- The crevice nozzle is used for cleaning in tight spaces.
- Thanks to the LED indicator, you can see the battery level.

TECHNICAL DATA

Type of appliance	Cordless stick vacuum cleaner
Model	SZ-2010
Maximum operating time	45 minutes
Maximum charging time	4 hours
Rechargeable battery	Li-Ion 1500mAh
Adapter	Adaptor Input: 220-240V 50/60Hz Output: 100-240V 50/60Hz
Capacity	1,5L
Power	100W

WARNING - MUST READ

DO NOT USE ANY CHARGING ADAPTORS WITH THE VACUUM CLEANER OTHER THAN THE ONE SUPPLIED.

DO NOT USE THE VACUUM CLEANER WITHOUT THE HEPA FILTER OR FILTER CONE IN POSITION; THE HEPA FILTER AND FILTER CONE MUST BE CORRECTLY FITTED BEFORE USE.

FAILURE TO ADHERE TO THE ABOVE COULD CAUSE DAMAGE TO THE VACUUM CLEANER.

FOLLOW THE INSTRUCTIONS BELOW TO CLEAN AND REFIT THE HEPA FILTER:



WWW.TRISTAR.EU

Tristar Europe B.V. | Swardenstraat 65
5048 AV Tilburg | The Netherlands

– Fine dust, construction dust.

- Only use and store the device in enclosed areas. Do not use the device outdoors, in rooms with high humidity or on hot surfaces.
- Check the devices and accessories for damage before each use. Do not use the appliance if the appliance, the cord, the plug or the filter are visibly damaged, do not attempt to repair the appliance yourself or replace the parts yourself. In case of damage, contact a qualified repair center or the helpdesk of the supplier.
- Do not use the device if it malfunctions, has vacuumed up liquids or objects or has fallen down. Have the device repaired by a qualified repair center.
- Only use the device if it has been completely and correctly assembled.

- CLEANING AND MAINTENANCE**
- Make sure you read the instructions before using the device.
 - Keep the device over a dust container.
 - Remove the HEPA filter from the dust container over a bin or a dust container.
 - Tap the filter over a bin or a dust container.
 - Rinse the filter with water for 15 minutes.
 - Reinstall the filter in the dust container when the filter is completely dry.
 - Never immerse the device in water. The device is not dishwasher safe.
 - Warning! The appliance contains various hazards to avoid.
 - Make sure the appliance is locked, remove or clean the brush bar.
 - Push the brush bar out of the dust container around the brush bar.
 - Never block the outlet.
 - Never vacuum flammable materials.

